

# Swivel Blinds

<p><b>How to Measure for Venetian Blinds</b></p> <ul style="list-style-type: none"> <li>• Decide if you want to install the blinds inside the window or on the face of the wall.</li> <li>• Check the depth of the window. The blinds must be able to rotate / tilt freely inside the window or be installed on the face of the wall (Face fix).</li> <li>• The wooden blind will be able to rotate easily if the depth of recess is deeper than 65mm.</li> <li>• Please check for any obstruction that might interfere with the blinds eg.: Burglar bars or window handles.</li> </ul>	<p><b>How to Install a Wooden Blind</b></p> <ul style="list-style-type: none"> <li>• Before installing wooden blinds make sure that you are aware of all component positions inside the track.</li> <li>• The brackets can only be installed in between the components of the Venetian head rail.</li> <li>• Drill the necessary holes &amp; insert wall plug (recommended 5.5mm drill bits for 6mm wall plugs or use 5mm drill bits for 5 / 35 hilti nail)</li> <li>• Insert the screw / hilti through bracket fixing hole and tighten / fix bracket.</li> <li>• Position the head rail up over the swivel bracket and push closed the extension arm to the right.</li> <li>• Unlock the blind by pulling cord to the centre of the blind, slowly let go of the cord until the blind reaches the sill or required length.</li> </ul>
<p><b>RECESS FIT (inside the window)</b></p> <ul style="list-style-type: none"> <li>• Measure the width from left to right (ie. top, centre &amp; bottom of the window) and deduct 10mm for clearance.</li> <li>• Measure the drop of the window and deduct 10mm for clearance on the drop (deduct 15mm on drop for 50mm wood).</li> </ul> <p><b>FACE FIX FIT (wall mounted)</b></p> <ul style="list-style-type: none"> <li>• Measure the width of the window and add 100mm (50mm overlapping each side)</li> <li>• Measure the drop of the window and add 100mm (to avoid drilling into the lintel).</li> <li>• Please note that a protruding sill may affect the movement of the wooden blind.</li> </ul>	<p><b>How to care for your blinds</b></p> <ul style="list-style-type: none"> <li>• Dust can easily be removed regularly using a feather duster or a vacuum cleaner with a brush attachment.</li> <li>• To dust, tilt the slats up &amp; then down (but not entirely closed) to reach the entire top &amp; bottom surfaces.</li> <li>• To vacuum, use the brush attachment end, tilt slats as above.</li> <li>• Wooden blinds can also be cleaned using a dry wood polish in liquid form which can be applied by hand.</li> </ul>
<p><b>ALWAYS SPECIFY IF BLINDS ARE RECESS OR FACE FIX!!</b></p> <p><b>STACKING / CONTROL OPTIONS</b></p> <ul style="list-style-type: none"> <li>• Wooden blinds can only stack at the top of the blind.</li> <li>• The operating controls can be on the left or right hand side</li> </ul>	<p><b>WE ULTIMATELY RECOMMEND THAT YOUR BLINDS BE CLEANED BY HIGH TECH CLEANERS.</b></p>

<p><b>How to Measure for Roller Blinds</b></p> <ul style="list-style-type: none"> <li>• Decide if you want to install the blinds inside the window or on the face of the wall.</li> <li>• Check the depth of the window. The blinds must be able to roll-up freely inside the window or be installed on the face of the wall (face fix).</li> <li>• The Roller blind will be able to rotate easily if the depth recess is deeper than 100mm.</li> <li>• Please check for any obstructions that might interfere with the blinds eg.: Burglar bars or window handles.</li> </ul>	<p><b>How to Install a Roller Blind</b></p> <ul style="list-style-type: none"> <li>• Drill the necessary holes &amp; insert wall plugs (recommended 5.5mm drill bits for 6mm wall plugs or use 5mm drill bits for 5 / 35 hilti nail)</li> <li>• Insert the screw / hilti through bracket fixing hole and tighten firmly.</li> <li>• For recess fit, install brackets on either side of window. For face fix fit (ie. wall mount), mark and install brackets apart with respect to the total width size of the roller blind order.</li> <li>• Insert the roller blind ends into bracket slots with the fabric positioned behind the roll.</li> <li>• Two chain connectors are applied on the control chain as a roller drop control stopper. This is to control the level of the drop above the windowsill (ie. +/- 10mm) or to just below the roller head rail when rolled up or down.</li> </ul>
<p><b>RECESS FIT (inside the window)</b></p> <ul style="list-style-type: none"> <li>• Measure the width from left to right, in the top of the window, where the track will fit.</li> <li>• Deduct 3-5mm off width for roller head rail clearance.</li> <li>• Measure the drop of the window in the left, centre and right hand side.</li> <li>• Deduct 7mm off the shortest drop measurement for clearance.</li> </ul>	<p><b>How to care for your blinds</b></p> <ul style="list-style-type: none"> <li>• Use a vacuum cleaner on a regular basis to keep the dust from the blinds.</li> <li>• Only wash the blinds once they are really dirty.</li> <li>• Let the blinds soak in cold water with a mild detergent.</li> <li>• It is not recommended to scrub fabric excessively.</li> <li>• Do not crease the blinds during the cleaning and drying process.</li> <li>• Hang the roller blind in a shaded area to dry.</li> </ul>
<p><b>FACE FIX FIT (wall mounted)</b></p> <ul style="list-style-type: none"> <li>• Measure the width of the window and add 150mm (75mm each side)</li> <li>• Measure the drop of the window and add 100mm (to avoid drilling into the lintel) &amp; 100mm to clear the bottom of the sill.</li> <li>• If the blind goes to the floor, deduct 20mm off the drop for carpet floors and 10mm for tiled floors.</li> </ul>	<p><b>WE ULTIMATELY RECOMMEND THAT YOUR BLINDS BE CLEANED ULTRASONICALLY BY HIGH TECH CLEANERS.</b></p>
<p><b>ALWAYS SPECIFY IF BLINDS ARE RECESS OR FACE FIX!</b></p> <p><b>CONTROL OPTIONS</b></p> <ul style="list-style-type: none"> <li>• The operating controls can be on the left or right hand side.</li> </ul>	